

# Voip2GSM Quick Installation Guide



## Content

1. One Voip2GSM GSM Gateway.
2. One 12V 2A 110/220 Power Supply.
3. Two GSM antennas.
4. One LAN cable and one LAN cross cable.
5. One Com Cable for Debugging.
6. One Software Installation CD.

## Installation

1. Insert the SIMs at the back of the gateway.
2. Connect the **PSTN** line to the gateway as shown above.
3. Connect the **PBX** or Analog phone to the gateway as shown above.
4. Connect the **LAN** cable to the gateway as shown above.
5. Position the antennas at least 1M from the gateway and connect them to the gateway.
6. Connect the power to the Gateway.
7. Insert the CD in the CDRom drive.
8. Run the **Setup.exe** that's on the CD and install the PC Management Software.
9. Run the PC Software from the Voip2GSM shortcut on the Desktop.
10. Press the **connect** tab to open the connect window.
11. Enter the default IP address **10.16.2.245**.
12. Enter the default port **2007**.
13. Select **TCP/IP** in the Connection Mode and press OK.
14. Set the setting to fit your requirement and press save.
15. The Gateway is now ready to work.
16. For further information consult the **manual** in the CD or in our website.

**Note:** If your are in a different subnet use the TCP/IP Cross Cable to connect directly to the PC, connect then to the Software and change the IP Address to a more suitable address.